



Parts List		
ITEM	QT	DESCRIPTION
1	1	ANTENNA
2	1	POLE (Not Supplied)
3	2	MNT-16-1
4	2	MNT-16-4
5	2	MNT-16-3
6	2	MNT-5-1
7	6	Hex Cap Screw NC 1/4-20 x 3/4
8	12	NUT NC 1/4-20
9	12	Helical Spring Lock Washer #1/4
10	12	Plain Washer #1/4
11	4	Hex Bolt M8 x 1.25 x 120
12	4	Plain Washer No. M8
13	4	Helical Spring Lock Washer No. M8
14	4	Hex Nut M8 x 1.25

Mounting instructions - Azimuth and Elevation Tilt Mount MNT - 25

- Place items No.3 on the antenna(1), at its low back and high back (two places) as illustrated. Align with the screw holes.
- Connect items No. 3 to the antenna with spring washers (9), plain washers (10) and nuts (8).(2 x 2 places)
- Tighten the nuts at a torque of 30 In*Lbs.
- Connect item No. 6 to item No. 3 in the upper side of the antenna as illustrated, with items 7,8,9,10. Leave screws slightly loose.
- Connect item No. 6 to item No. 5 as illustrated, with items 7,8,9,10 at the point marked 2'.
- Connect item No. 3 to item No. 4 in the lower side of the antenna as illustrated, with items 7,8,9,10. Leave screws slightly loose.
- Connect item No. 4 to item No. 5 with items 11,12,13,14, at its low back and high back (two places) sides of the antenna as illustrated.
- adjust the desired azimuth angle and tighten to the pole with a torque of 30 In*Lbs.
- Adjust the desired elevation tilt to the angle marked, and fully tighten the loose screws.